


T9650_E9651

System: \900RW
 Typical Use Vertical


Reinforcement None
 I = 6.64
 S = 2.07
 Alloy: 6063 T6

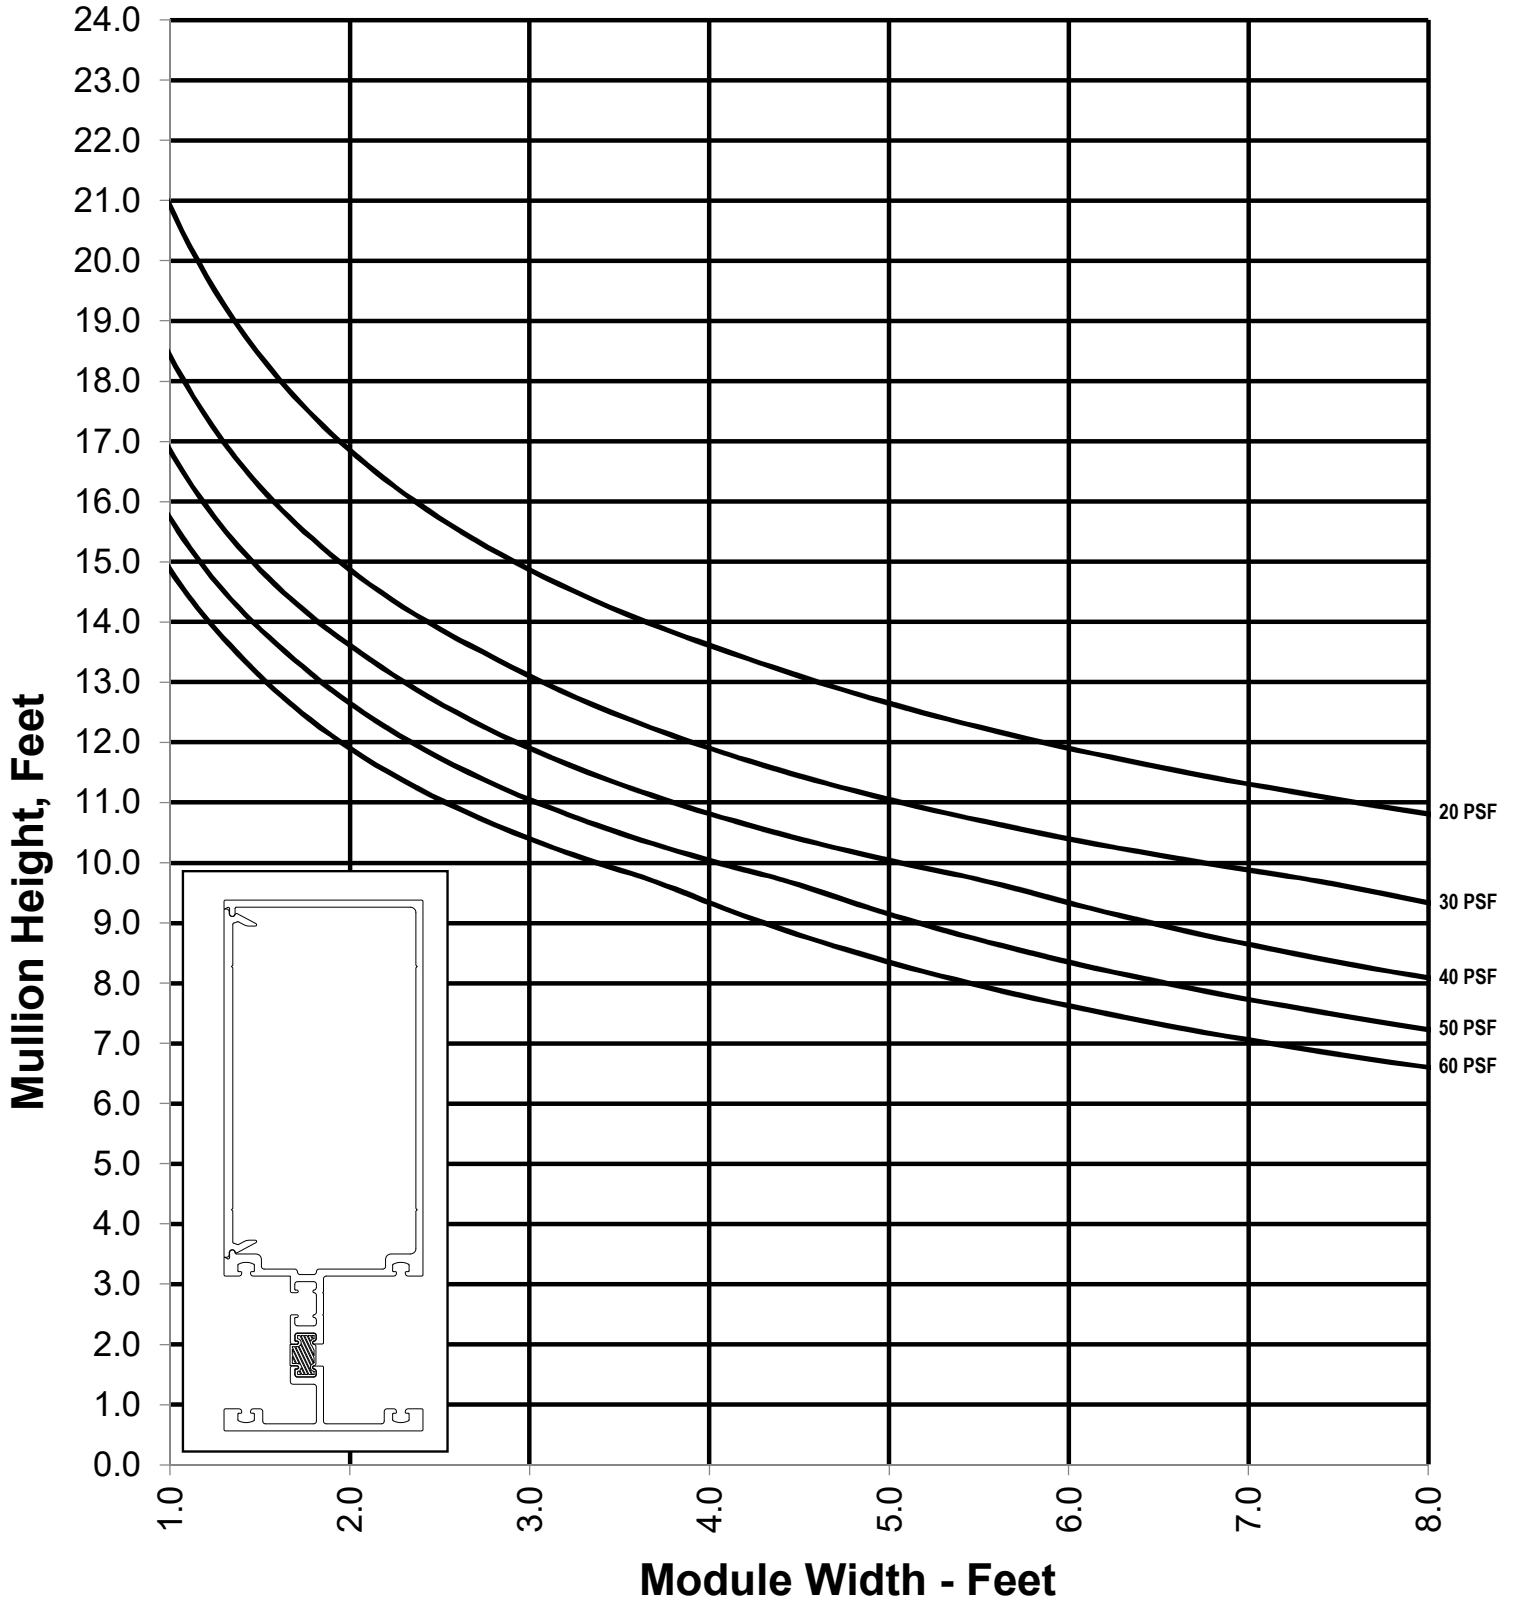

T9654_E9651

System: \900RW
Typical Use Vertical


Reinforcement None
I = 8.67
S = 2.54
Alloy: 6063 T6

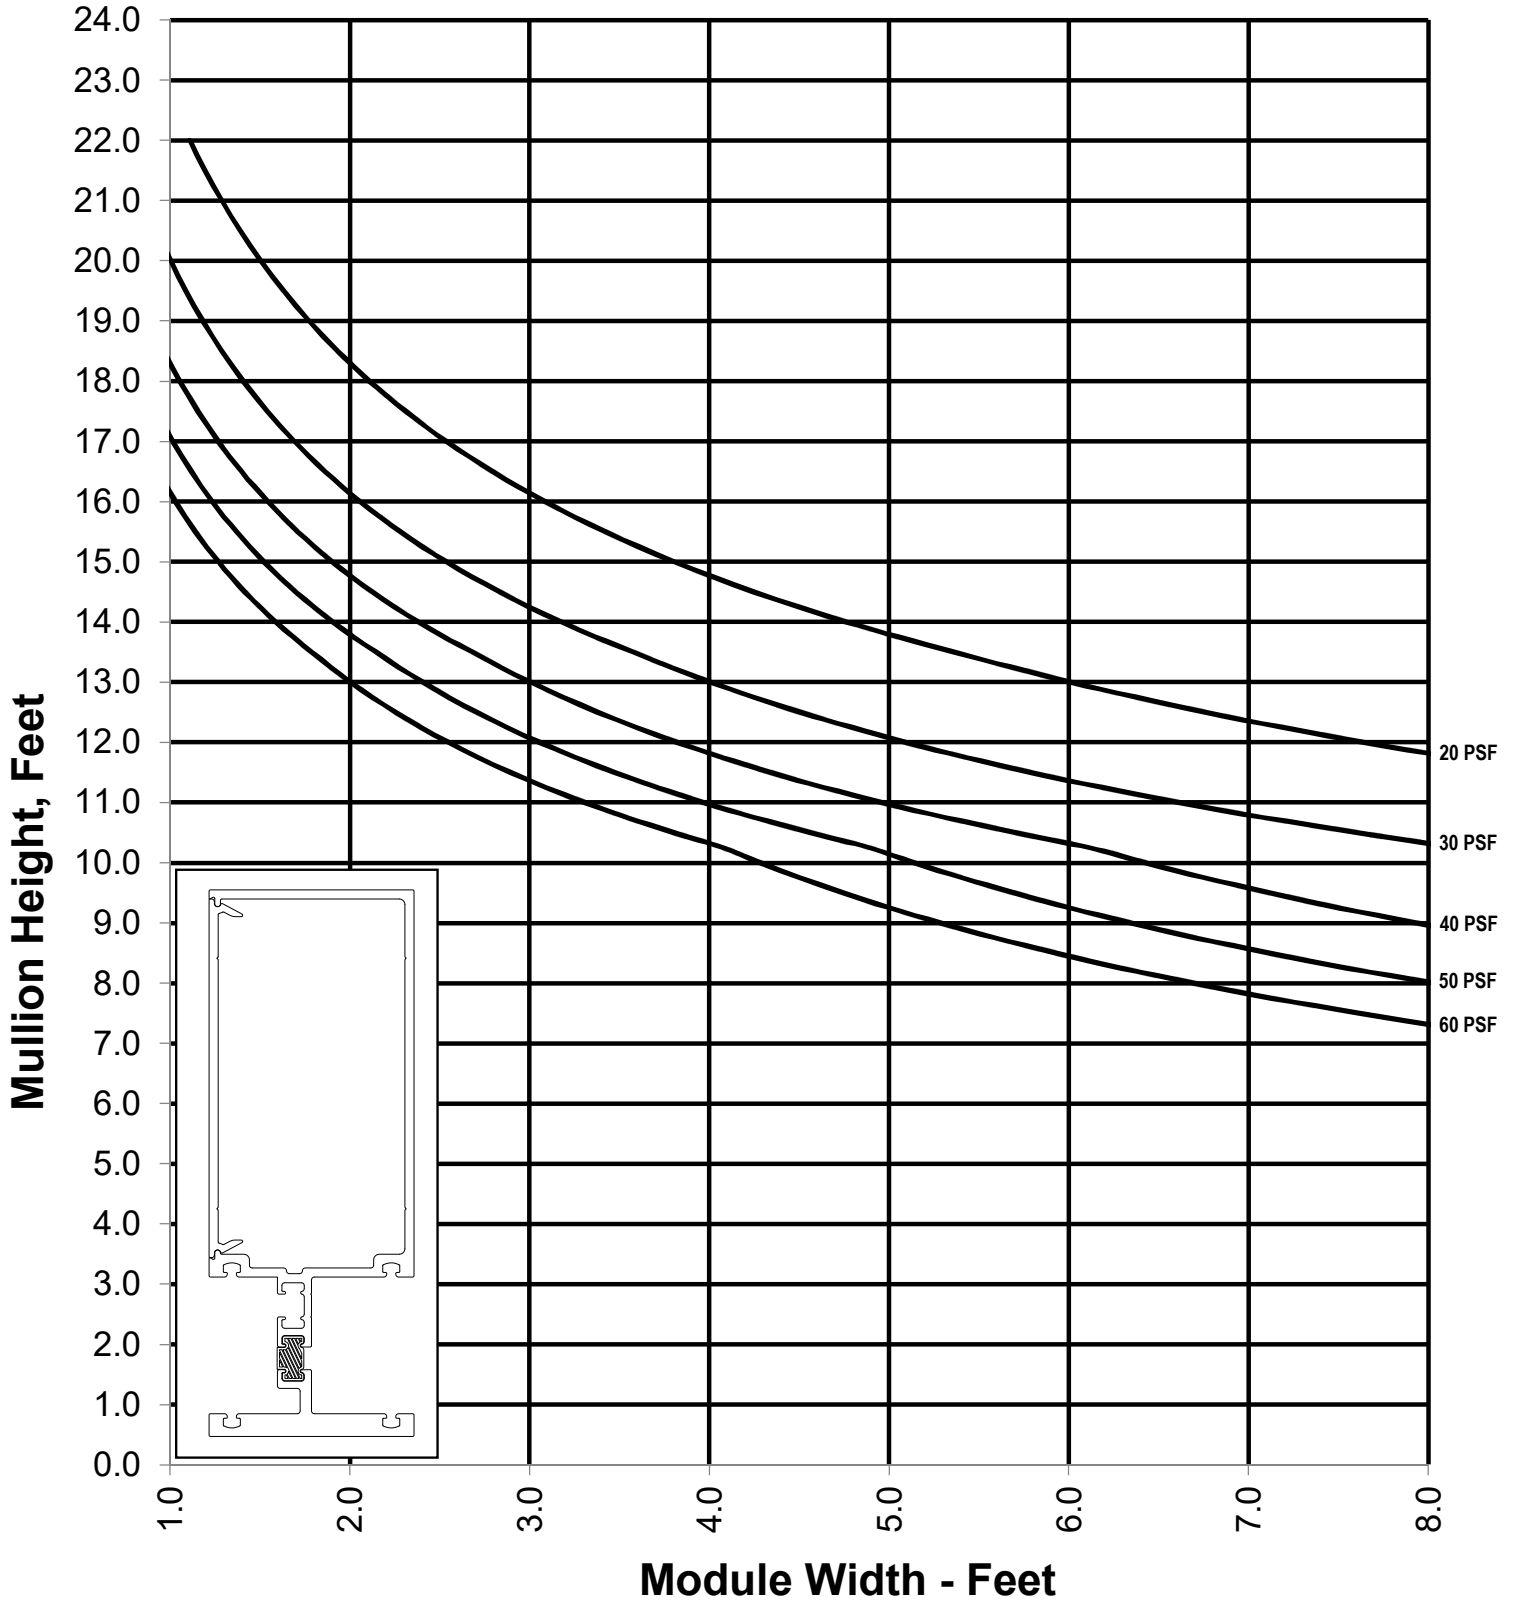

T9652_T9653

System: \900RW
 Typical Use Vertical Expansion Mull


Reinforcement None
 I = 13
 S = 4.03
 Alloy: 6063 T6

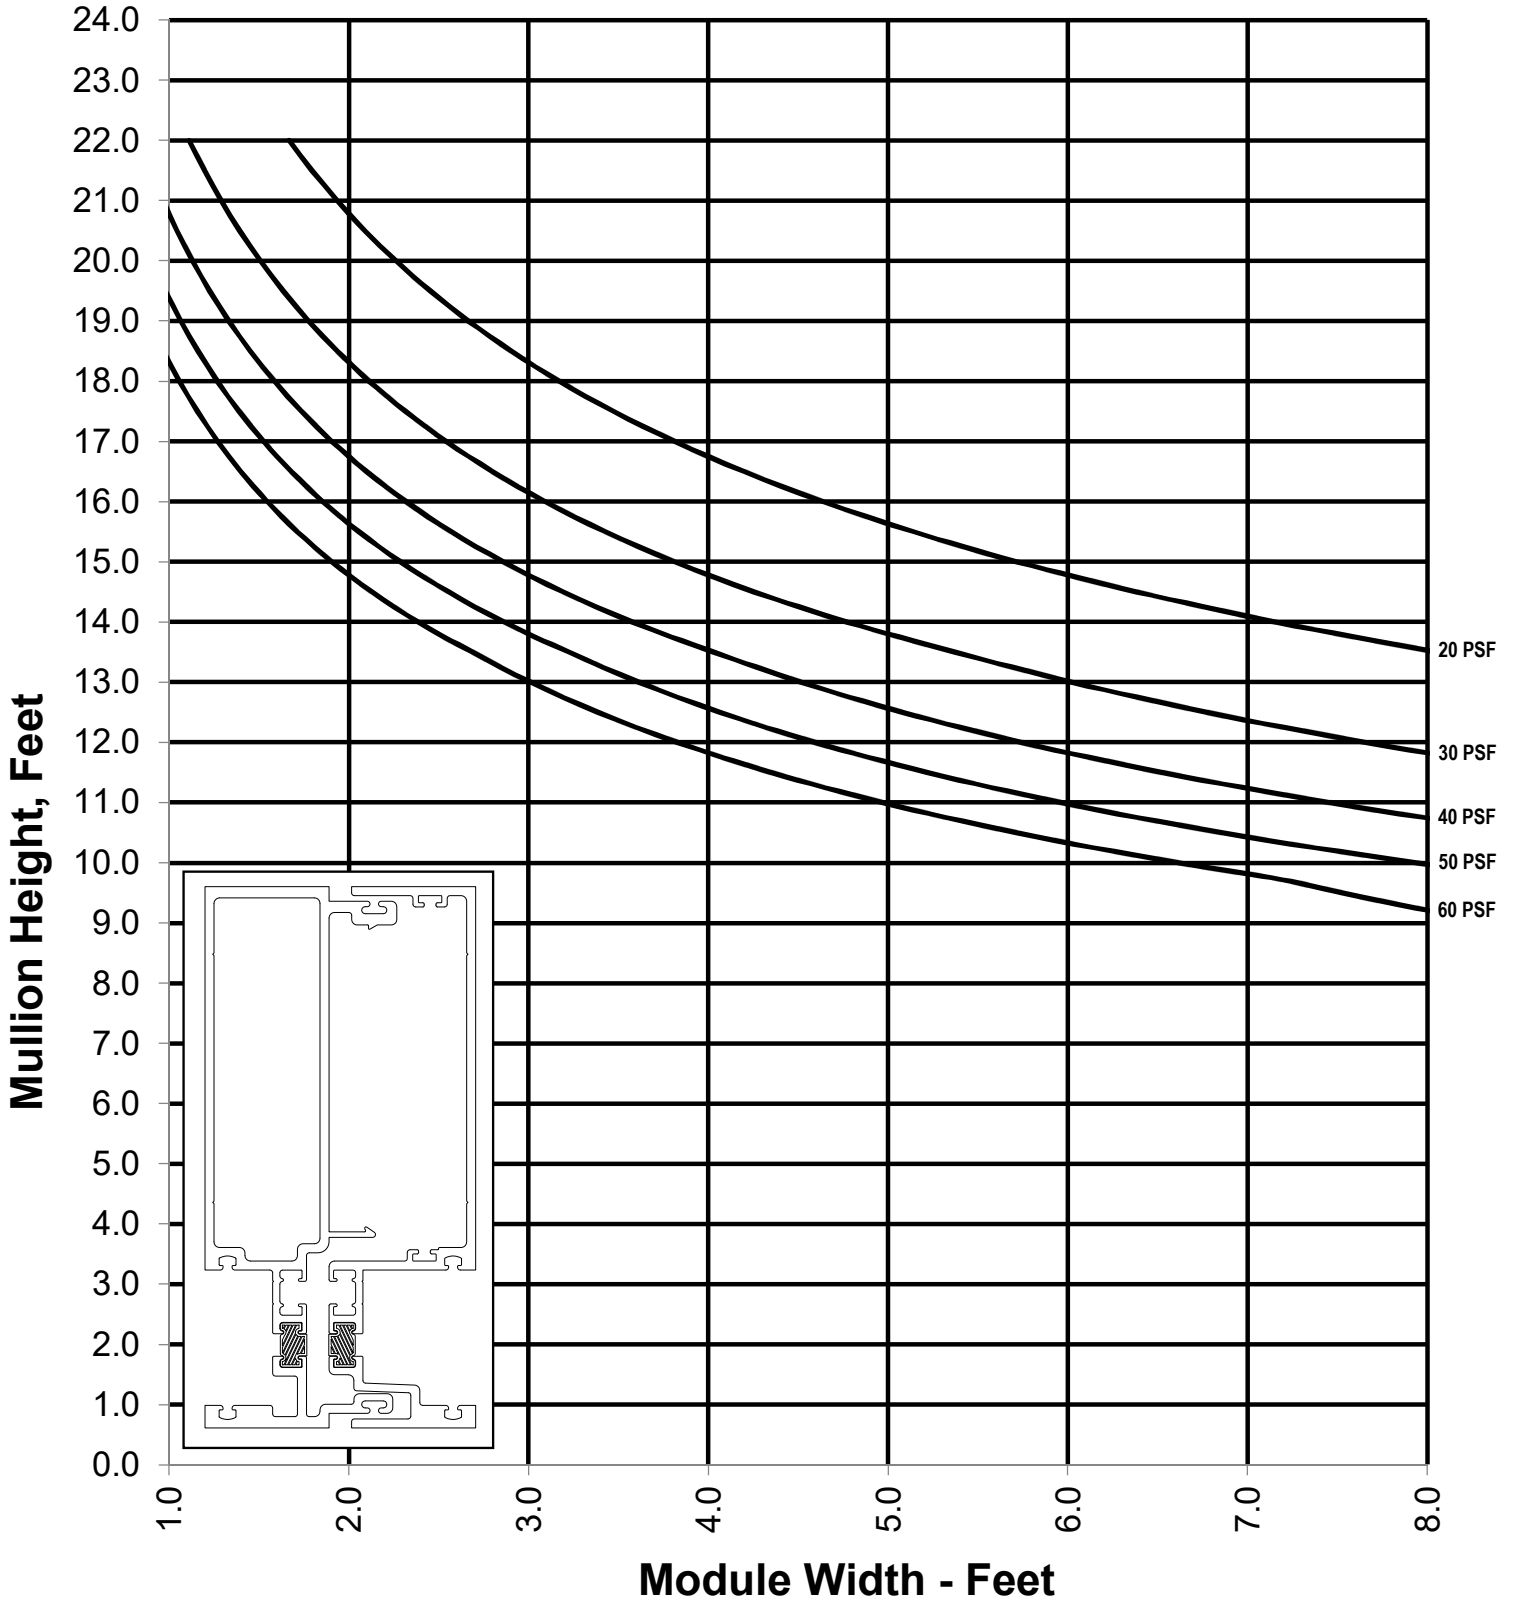

E9630

System: \900RW
Typical Use Vertical Silicone Glazed


Reinforcement None
I = 4.59
S = 2.11
Alloy: 6063 T6

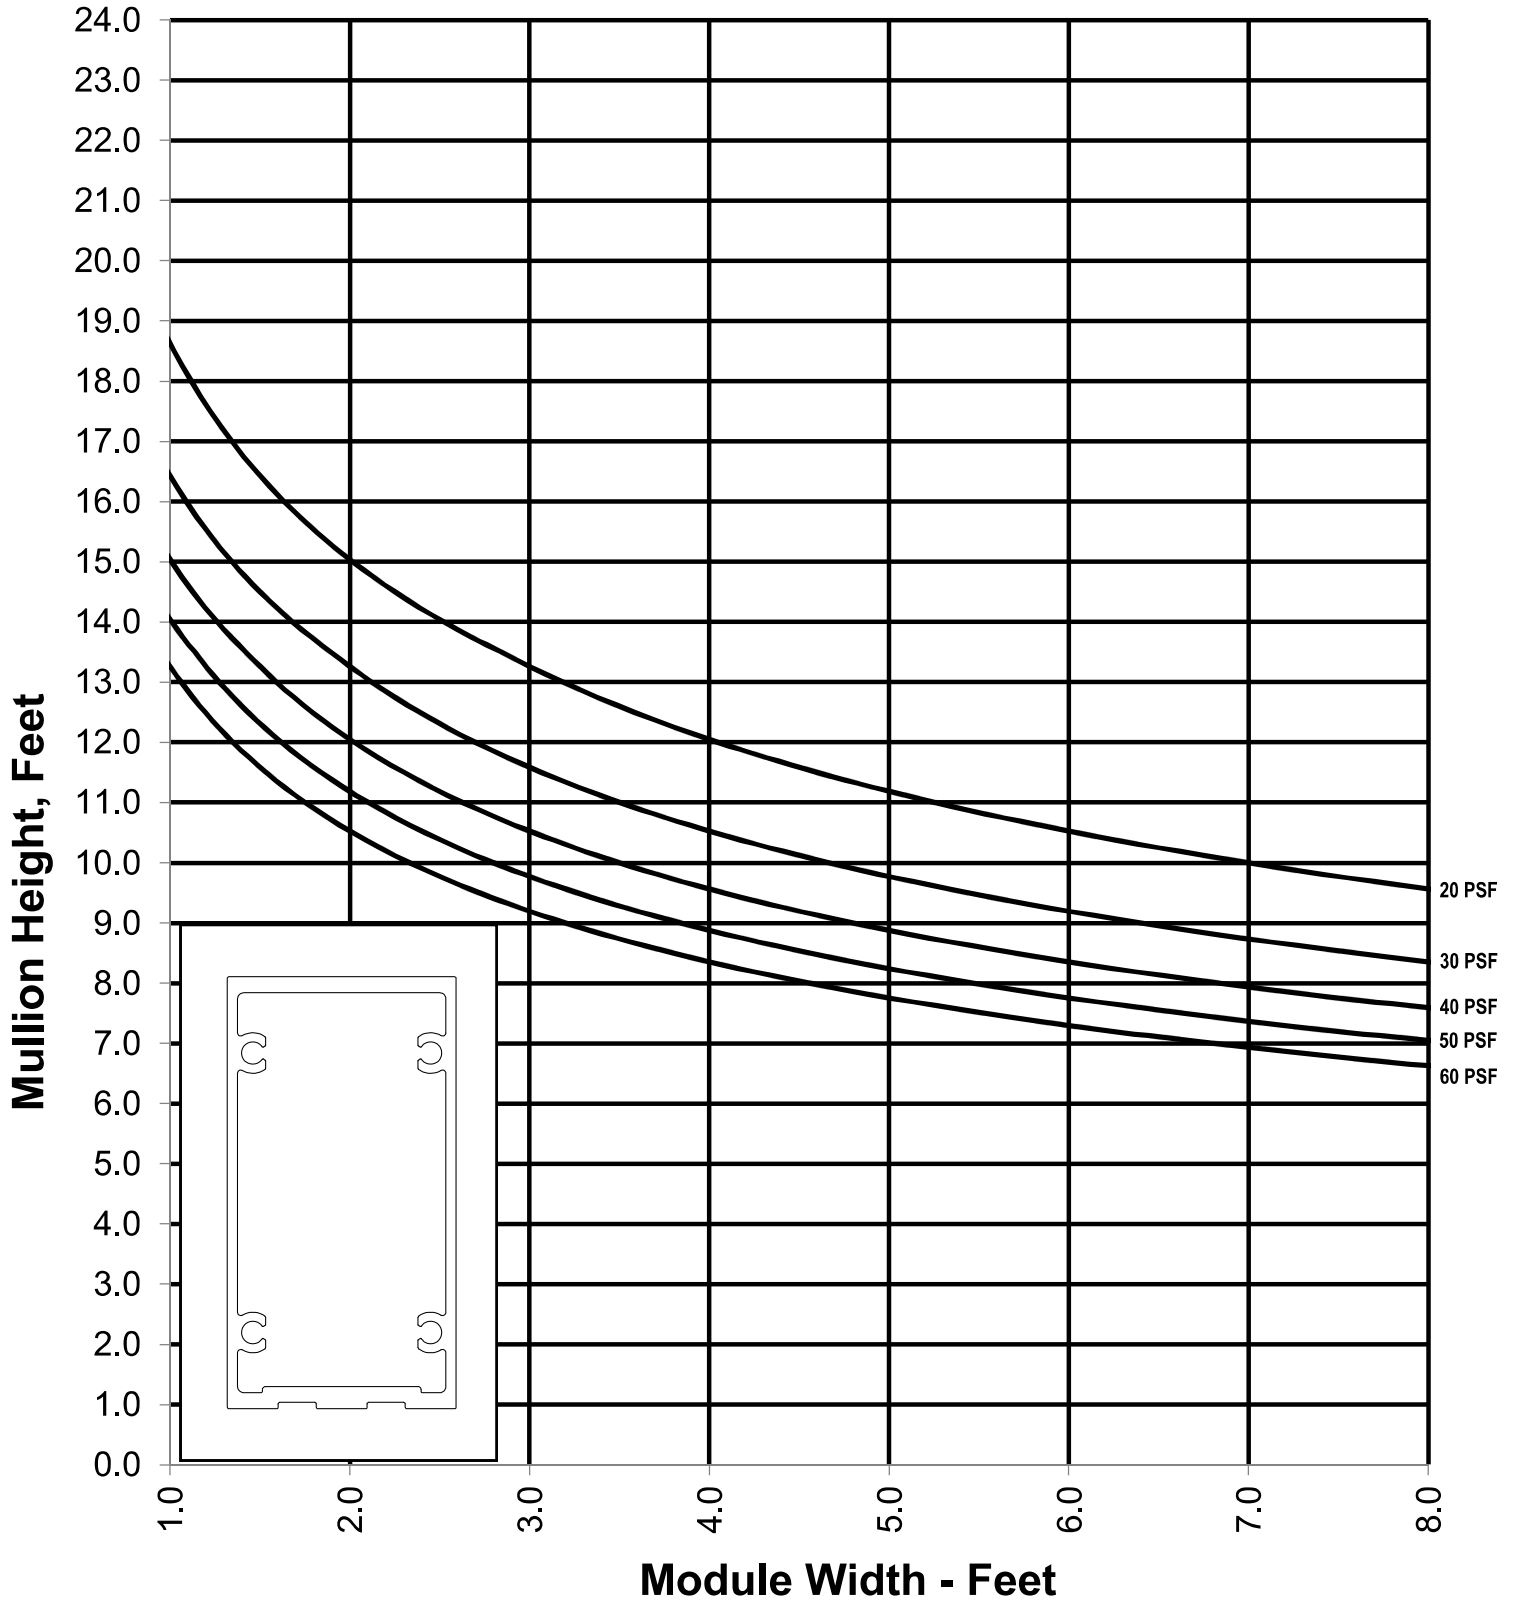

A964041_T9653

System: \900RW
Typical Use Corner 90 degree

Reinforcement None
I = 27.6
S = 5.02
Alloy: 6063 T6

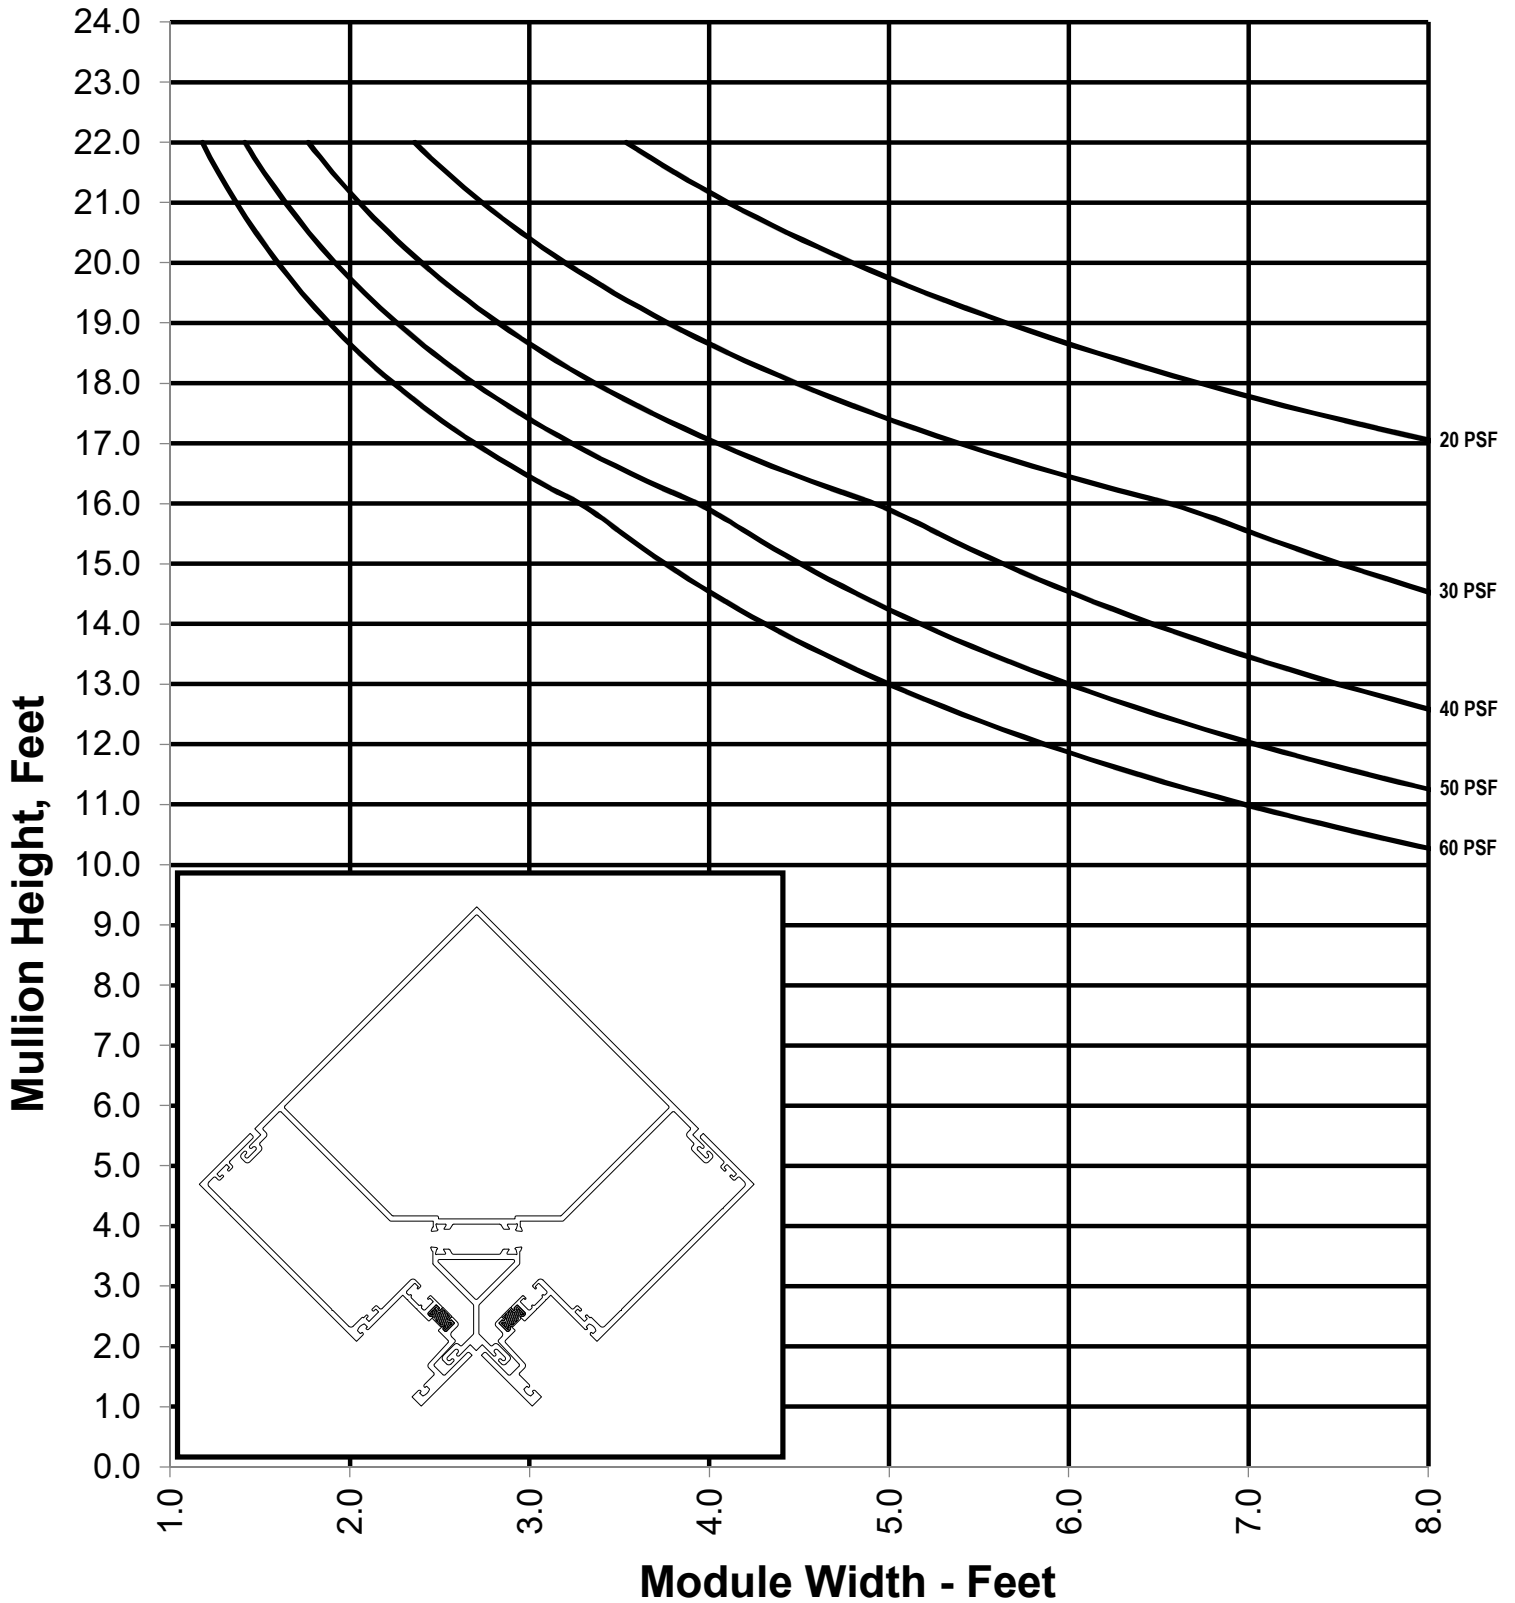

A964243_T9653

System: \900RW
Typical Use Corner 135 degree

Reinforcement None
I = 19.5
S = 5.18
Alloy: 6063 T6

